

# Expulsion Fuse Link

## Type T - 1A through 50A

11kV through 38kV



Illustrative

- Interrupting Capacity Assured.
- Contact us about other standards, currents and curves.

Type	Code (Removable Button Head)		Code (Solid Button Head)	
	Fuse Element		Fuse Element	
	Silver	Copper	Silver	Copper
1T	EF1TNCIR	EF1TNCIR	EF1TNCIF	EF1TNCIF
2T	EF2TNCIR	EF2TNCIR	EF2TNCIF	EF2TNCIF
3T	EF3TNCIR	EF3TNCIR	EF3TNCIF	EF3TNCIF
5T	EF5TPCIR	EF5TCCIR	EF5TPCIF	EF5TCCIF
6T	EF6TPCIR	EF6TCCIR	EF6TPCIF	EF6TCCIF
8T	EF8TPCIR	EF8TCCIR	EF8TPCIF	EF8TCCIF
10T	EF10TPCIR	EF10TCCIR	EF10TPCIF	EF10TCCIF
12T	EF12TPCIR	EF12TCCIR	EF12TPCIF	EF12TCCIF
15T	EF15TPCIR	EF15TCCIR	EF15TPCIF	EF15TCCIF
20T	EF20TPCIR	EF20TCCIR	EF20TPCIF	EF20TCCIF
25T	EF25TPCIR	EF25TCCIR	EF25TPCIF	EF25TCCIF
30T	EF30TPCIR	EF30TCCIR	EF30TPCIF	EF30TCCIF
40T	EF40TPCIR	EF40TCCIR	EF40TPCIF	EF40TCCIF
50T	EF50TPCIR	EF50TCCIR	EF50TPCIF	EF50TCCIF

Individual Box - Add /BOX at the end of the code

## Type T - 65A through 100A

11kV through 38kV



Illustrative

- Interrupting Capacity Assured.
- Contact us about other standards, currents and curves.

Type	Code (Removable Button Head)		Code (Solid Button Head)	
	Fuse Element		Fuse Element	
	Silver	Copper	Silver	Copper
65T	EF65TPCIR	EF65TCCIR	EF65TPCIF	EF65TCCIF
80T	EF80TPCIR	EF80TCCIR	EF80TPCIF	EF80TCCIF
100T	EF100TPCIR	EF100TCCIR	EF100TPCIF	EF100TCCIF

Individual Box - Add /BOX at the end of the code

## Type T - 140A through 200A

11kV through 38kV



Illustrative

- Interrupting Capacity Assured.
- Contact us about other standards, currents and curves.

Type	Code (Removable Button Head)		Code (Solid Button Head)	
	Fuse Element		Fuse Element	
	Silver	Copper	Silver	Copper
140T	EF140TPR	EF140TCR	EF140TPF	EF140TCF
200T	EF200TPR	EF200TCR	EF200TPF	EF200TCF

Individual Box - Add /BOX at the end of the code